

ASSEMBLY AND OPERATING MANUAL

HEATSCOPE®

STAND

Stand for PURE and NEXT heaters



A freestanding support for your HEATSCOPE heater

Mounting of the base, column and heater

GB

Radiant Heater

Read before mounting and keep with your equipment.

BEFORE YOU START

Your HEATSCOPE STAND

The HEATSCOPE STAND allows the installation of a PURE or NEXT heater on an freestanding support. This manual presents the assembly of the base, column, support and connector of the heater.

Reference	Finish
MHS-PN-STD-AB	Black
MHS-PN-STD-WT	White

Assembly components

The STAND includes a galvanized steel base, an aluminium column and a stainless steel mounting bracket. The finishes are matched to the stand. The cable has a Schuko mains plug and an ILME connector on the heater side.

The illustrations show the parts and attachments necessary for the assembly stages. The associated heater is selected separately.

In this manual

Preparation and characteristics	03
Base and column, steps 1 to 4	04-05
Positioning the stand	06
Support and heater, steps 5 to 8	07-08
ILME connector, step 9	09
Dimensions and overall size	10
Use and maintenance	11
Contact Radiant Heater	12

01 / PREPARATION

Prepare the assembly

Unpack the parts on a flat surface and protect their finishes during assembly. Check that the base, column, bracket, feet, fasteners and cable with its connectors are present.

Assemble and connect with the mains plug disconnected. Place the stand on a stable, level floor. Route the cable to keep the walkway clear and avoid contact with hot heater surfaces.

Characteristics of the STAND

Power supply	220-240 V AC, 50/60 Hz
Base diameter	600 mm
Total stand height	2151 mm
Weight excluding heater	25,5 kg
Cable	5.0 m in total, 2.5 m visible
Connectors	Schuko plug at the mains end, ILME connector at the heater end
Protection of STAND	IP65
Finishes	Black or white
Heater control	Manual or external, on/off, 50% and 100%

Before turning on the heater


Check that the fasteners are secure and the stand is stable. Follow the safety distances and operating conditions in the manual for the associated PURE or NEXT heater. Keep this assembly manual together with the heater's manual.

02 / BASE AND COLUMN

Mount the base: steps 1 and 2


1. Fit the base feet

Install the four feet at the positions shown beneath the base, using the screws illustrated.

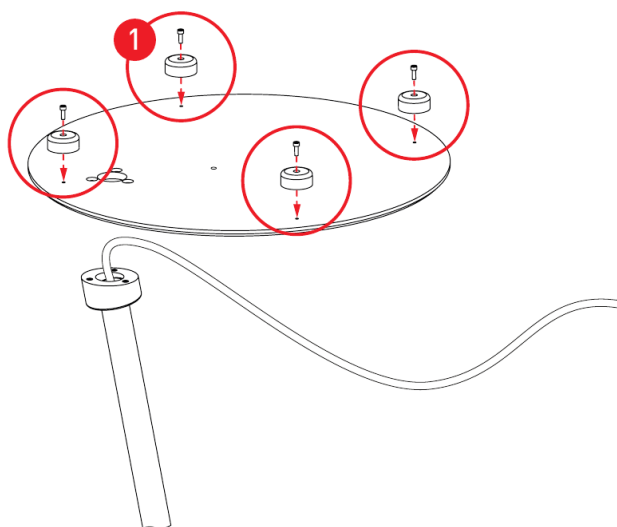

2. Position the column

Pass the cable through the opening provided in the base, then present the column in front of the fixing points.

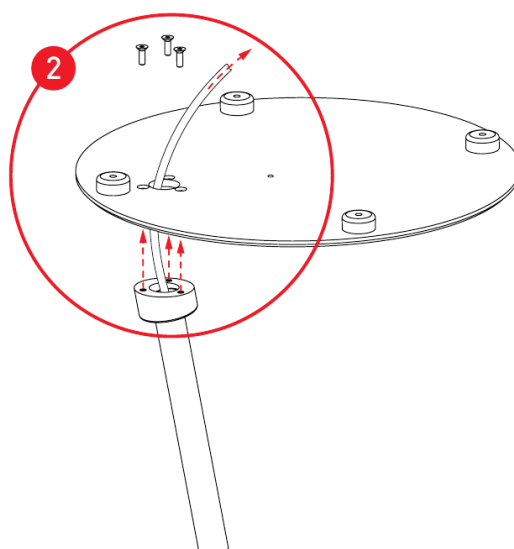


02 / BASE AND COLUMN

Fix the column and cable


3. Assemble the column to the base

Put in place and tighten the mounting screws represented. Orient the cable under the base in the direction of the diagram.

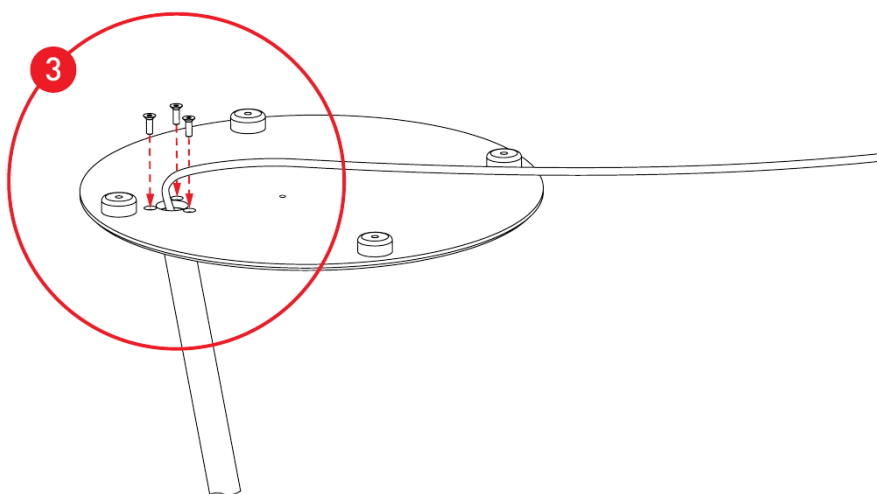

4. Keep the cable under the base

Place the cable retaining bracket around the cable and secure it with the screw at the indicated point. Keep the cable correctly positioned beneath the base.

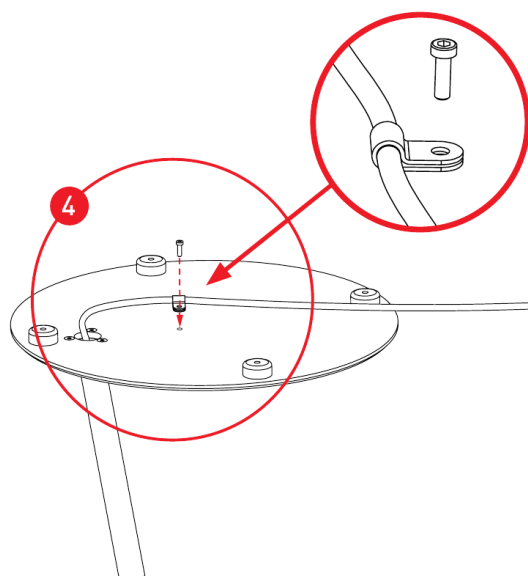


02 / POSITIONING

Turn the assembled stand upright

When the base and column are assembled, turn the assembly upright so that its feet rest on the floor. Support both the base and column during this operation.

Place the stand on the chosen location, then check its stability and cable outlet. The connector for the heater is located in the upper part of the column.

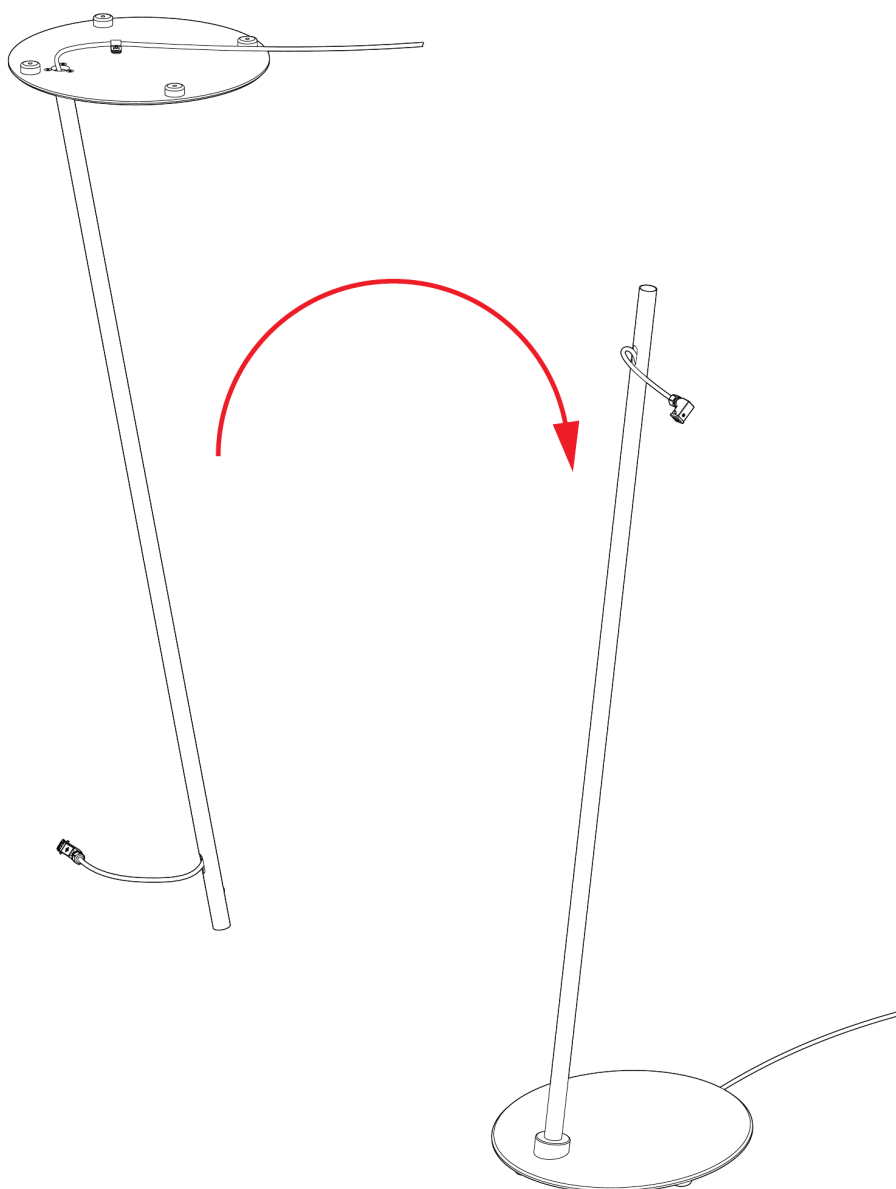


The base rests on its feet; the mains cable exits at the base of the stand.

03 / HEATER BRACKET

Mount support: steps 5 and 6

Prepare the two bracket components. The block with the connecting pin is fixed to the top of the column; the matching bracket is fitted to the back of the heater.

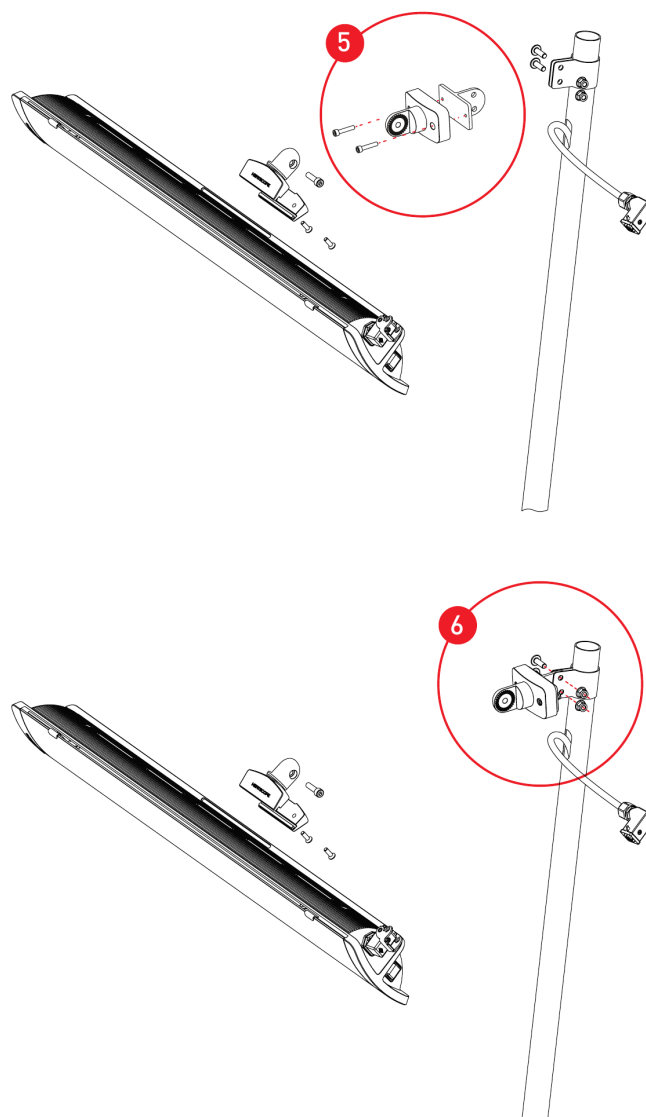


05. Identify the bracket components and their orientation using the exploded view.

06. Fix the support block at the top of the column with the screws represented. Orient the axis towards the side where the heater will be placed.

03 / HEATER BRACKET

Fix heater: steps 7 and 8

Present the heater near the support and hold it during assembly. The two figures below show the fastening of the leg to the back of the heater and its binding to the stand.

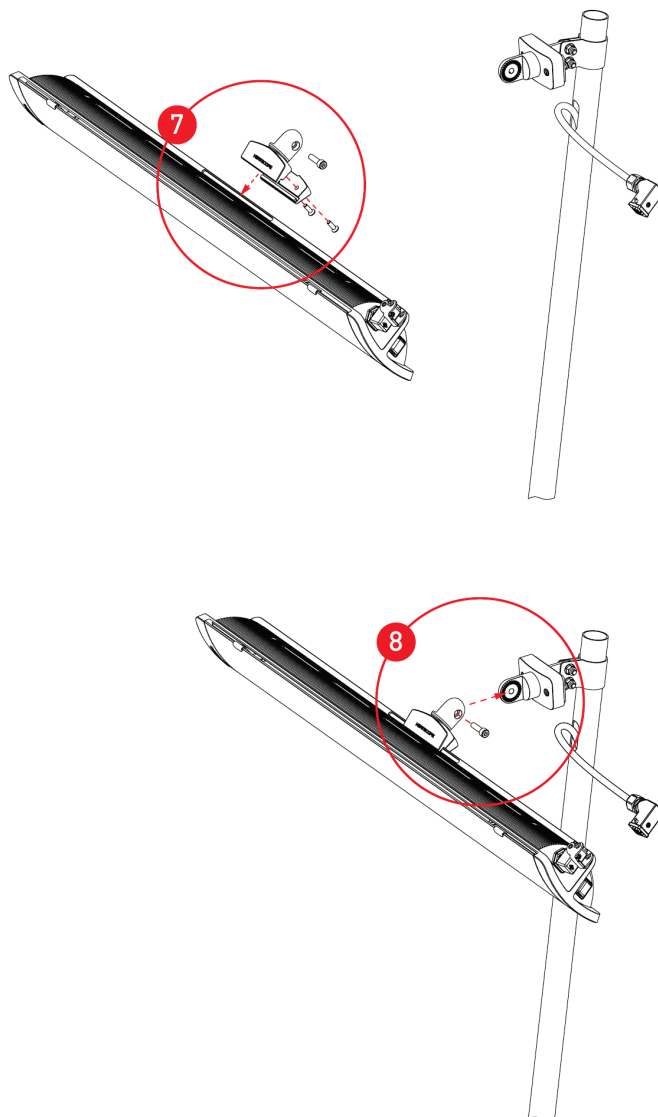

07. Attach the bracket to the back of the heater at the indicated position, using the screws shown.


08. Present the heater on the axis of the column support, assemble the elements and tighten the fastening. Check that the heater is maintained before releasing it.

04 / ELECTRICAL CONNECTION

Connect ILME connector

Keep the mains plug disconnected during this step. Connect the ILME connector on the cable from the STAND to the heater connector in the direction indicated by the arrow.

Check that the connector is properly engaged and maintained. Arrange the cable so that it is not tense, stuck, or in contact with the heater's hot housing.

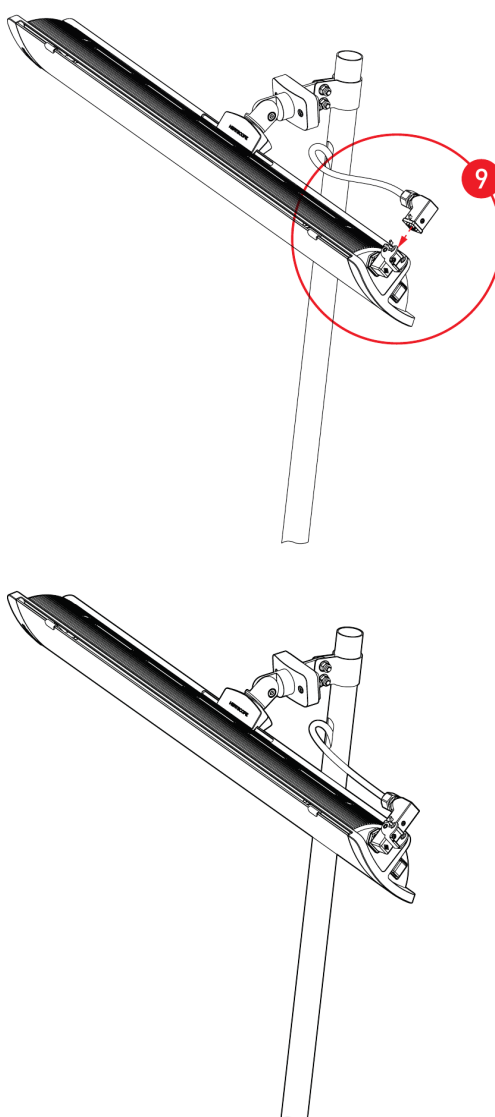


9. Cable connection to the heater and view of the connected assembly.

05 / DIMENSIONS

Dimensions and overall size

The three views show the stand to the side, top and face. The dimensions of the plane are expressed in millimetres.

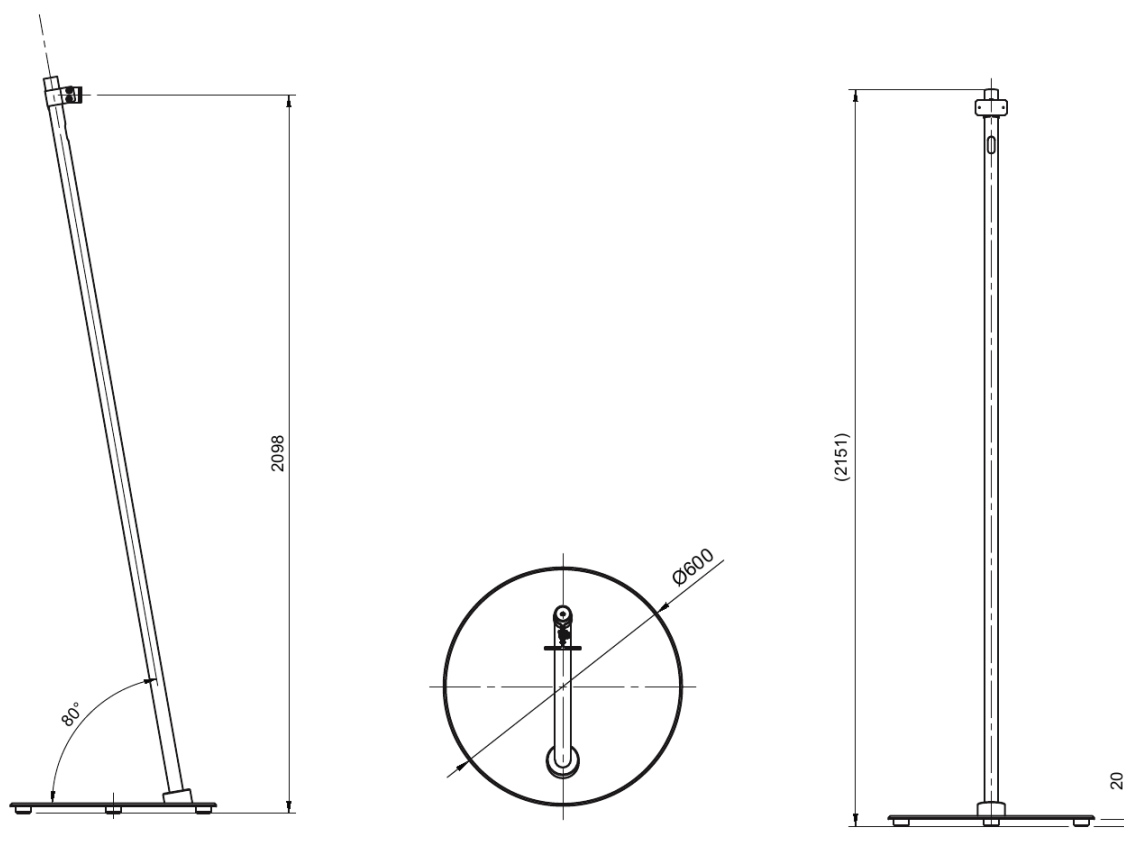

Diameter of base	Ø 600 mm
Total height	2151 mm
Stand weight excluding the heater	25,5 kg
Cable visible	2,5 m

Choose Location

Allow sufficient space for the base, heater and cable route. Keep the stand stable; follow the distances from people, furniture and walls specified in the associated heater's manual.

06 / OPERATION

Use your STAND set

First start-up

01. Check the base, column, bracket and heater fasteners. Check that the feet rest on the floor and the ILME connector is correctly engaged.

02. Connect the Schuko plug to a suitable earthed socket with a supply protected by a residual-current device.

03. Use the heater controls for running, stopping and selecting power, according to the PURE or NEXT model instructions.

With an optional SmartBox

A SmartBox allows remote control of the heater. With this housing, place the two heater switches on ON, then use the control specific to your version: HEATSCOPE infrared control or Somfy io remote control.

For housing installation, pairing and settings, follow the corresponding SmartBox manual.

Moving the assembly

Switch off the heater, disconnect the mains plug and wait for it to cool. Two people must move the assembly, supporting the stand and column. Set the base down on a stable floor, then check that it is secure and the cable is correctly routed.

Stand maintenance

After disconnecting the mains plug, clean the base, column and bracket with a soft, slightly damp cloth. Regularly check the fasteners, feet and visible condition of the cable.

For maintenance of the heater, follow its own instructions. In case of deteriorated parts or unusual functioning, contact Radiant Heater before any intervention.

YOUR CONTACT

Radiant Heater

For a question about the installation of the STAND, an accessory or a post-purchase assistance, contact Radiant Heater.

Phone

+33 (0)4 23 15 02 48

Contact us online

www.radiant-heater.com/contact

To facilitate your request

Provide your order number, stand reference and the model of the associated heater. For a mounting query, include a photo of the bracket and installed assembly.

Your equipment

Accessory	HEATSCOPE STAND
References	MHS-PN-STD-AB / MHS-PN-STD-WT
Finishes	Black/White
Featured heaters	HEATSCOPE PURE and NEXT

Find the products on our website

HEATSCOPE STAND – PURE & NEXT (All Black)

HEATSCOPE STAND – PURE & NEXT (White)