
PRODUCT AND USE GUIDE**HEATSTRIP®**

Design 2400 W on a stand

Reference: THHAC-019-THH-2400-AEU**2 400 W · Black**

External control

Mounting, controls and maintenance of your heater.

A document dedicated to this reference, with useful guidance for enjoying your outdoor space.

English

HEATSTRIP · THHAC-019-THH-2400-AEU

Your product in detail

Radiant Heater reference	THHAC-019-THH-2400-AEU
Range	Design Classic on a stand
Rated power	2 400 W
Power supply	European version: 230 V AC
Dimensions	Stand: 2 158 × 686 × 620 mm
Finish	Black
Protection rating	IP55
Control	External control

How the heater works

Electric radiant panel without visible red light, heating people and surfaces within its radiation zone.

Consumption at full power

One hour of operation at maximum power uses 2.4 kWh. Actual consumption depends on operating time and the selected level, where the model allows adjustment.

HEATSTRIP · THHAC-019-THH-2400-AEU


Position the heater

Prepare the floor space

Place the stand on a flat, stable surface. Allow room for the base and route the cable away from passageways.

Direct the radiant face towards the places where people sit. Keep the clearances around the heater unobstructed and check stability before switching on.

European stand	Height 2 158 mm
Position	Stable ground; castors and base fully supported
Moving	Heater switched off, unplugged and completely cool

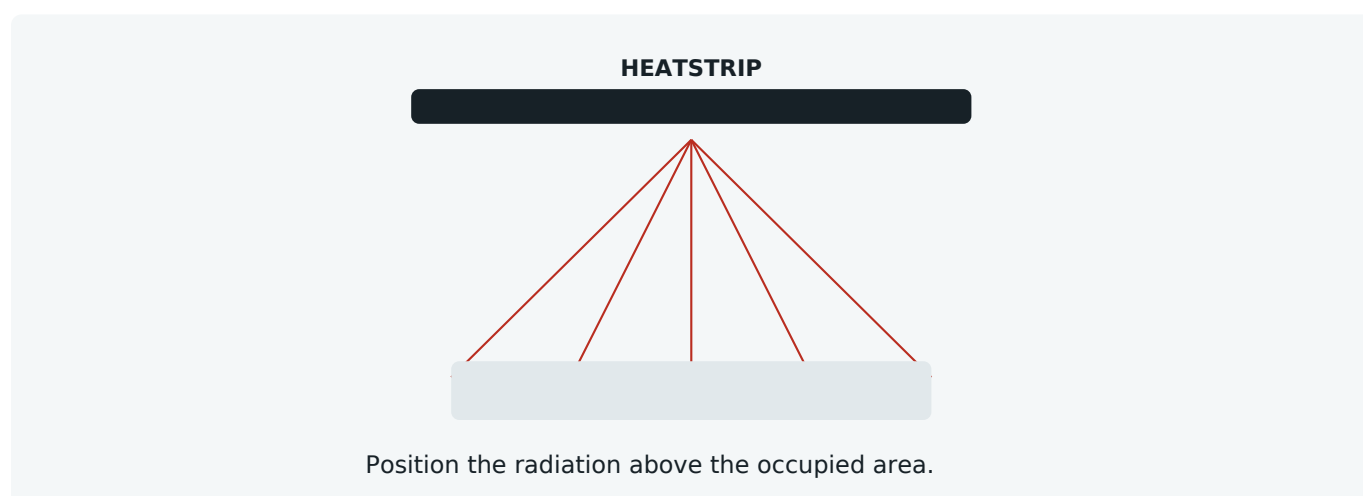

A layout suited to your use

The mobile stand lets you adapt the heated area to your patio layout. Keep the panel directed towards users and route the cable without tension or contact with hot surfaces.

HEATSTRIP · THHAC-019-THH-2400-AEU

Mounting and connection

01. Prepare the support

Lay out the base, column and connecting pieces from the European kit. Use its fasteners and check that the base rests correctly on the ground.

02. Assemble the column

Assemble the stand parts in the order specified for the supplied support. Check the assemblies and tighten the connecting pieces.

03. Secure the radiant heater

Fit the heater's corresponding brackets to the top of the stand. Centre the heater, set its direction and check the fastenings.

04. Route the cable

Keep the cable away from the heater and castors. Keep passageways clear and leave enough cable length for a connection without tension.

Electrical supply

Disconnect the power before making any connection. The circuit, controls and connections must suit the product's rated power. Keep the cable away from hot surfaces and maintain earth continuity for the intended connection.

Check the cable and connection of the supplied appliance. Provide a power supply suited to its rating and position.

Before first switching on, check the fastenings, stability, cable route and clear space around the heater.

HEATSTRIP · THHAC-019-THH-2400-AEU

Controls and use

An external control suited to your heater

This model uses external power control suited to its load: a switch, timer or control device intended for the circuit.

Switch the heater on using this control, then switch it off after use. A compatible timer can switch it off automatically.

Switching on	Using the external control
Rated power	2 400 W
Off	External control or compatible timer

TT-MTR option

The TT-MTR wall controller offers 1, 2 or 4 hours, plus continuous mode. Its switching capacity is 16 A; the total connected load must stay within this limit.

WELL-POSITIONED WARMTH

Direct the heater towards the people and surfaces to be heated. For panel models, allow the heater to gradually reach its operating temperature.

After use

Switch off the heater using its controls. Let it cool completely before touching or cleaning it, or moving a heater on a stand.

HEATSTRIP · THHAC-019-THH-2400-AEU

Maintenance and your contact

Regular cleaning

Switch the heater off, disconnect its power supply and wait until it has cooled completely. The manuals specify at least 30 minutes after switch-off.

Clean the surfaces with a soft cloth and mild detergent, then remove residues with a clean cloth. Avoid abrasives, solvents and high-pressure jets. Keep electrical equipment and recess cavities protected from water.

Check the cable, brackets and fastenings. Maintenance at least every three months helps preserve the heater; clean more often where it is exposed to sea spray.

Guidelines for use

Keep children and people who need supervision away from hot surfaces. In a small space, continuously supervise anyone who cannot leave without help.

Do not cover the heater during use. Keep cables, fabrics, furniture and flammable materials away from its surfaces and observe the installation clearances.

If the cable or heater is damaged, disconnect the power and contact Radiant Heater before using it again.

A simple check if the heater does not start

Power supply	Check that power is available and the control is set correctly.
External control / timer	Check the control setting and selected duration if a timer is fitted.
Support	Check stability and the cable route before switching on again.

YOUR RADIANT HEATER CONTACT

+33 (0)4 23 15 02 48

radiant-heater.com/contact

For advice, quote reference THHAC-019-THH-2400-AEU and the mounting arrangement.