

PRODUCT MANUAL

HEATSTRIP®

Intense Max 2400 W

Reference: THX2400DCR-EU



2 400 W · Black

Infrared remote control, three levels

Mounting, controls and maintenance of your heater.

A document dedicated to this reference, with useful guidance for enjoying your outdoor space.

English

HEATSTRIP · THX2400DCR-EU

Your product in detail

Radiant Heater reference	THX2400DCR-EU
Range	Intense Max / Max DCR
Rated power	2 400 W
Power supply	European version: 230 V AC
Dimensions	979 × 170 × 80 mm
Weight	6 kg
Finish	Black
Control	Infrared remote control, three levels
Mains cable	1 m
Connection	Cable with plug

How the heater works

Two glass heating elements for direct radiation and responsive heat.


Consumption at full power

One hour of operation at maximum power uses 2.4 kWh. Actual consumption depends on operating time and the selected level, where the model allows adjustment.

HEATSTRIP · THX2400DCR-EU

Position the heater

Minimum heater height	2.1 m
Recommended mounting height	2.3 to 2.8 m
Maximum height	3.0 m outdoors; 3.5 m indoors

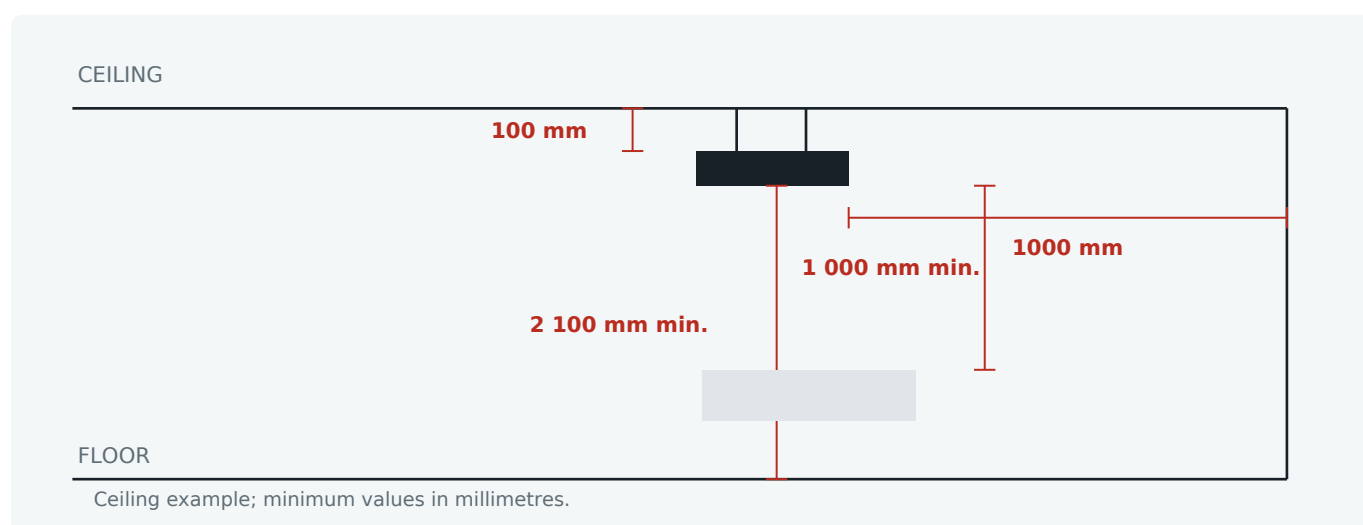

Radiant face / surface below	1 000 mm minimum
Ceiling, horizontal mounting	100 mm minimum
Ceiling, angled mounting	100 mm minimum
Rear wall, angled mounting	100 mm minimum

Keep at least 1500 mm between the angled heater and any lights or fans shown in front of it. For horizontal mounting, the manual specifies 300 mm. Do not position any light, fan or sprinkler below the heater.

HEATSTRIP · THX2400DCR-EU

Mounting and connection

01. Mark the fixing points

Determine the positions of the two brackets in the supporting structure. Allow for the heater's weight, mounting height and installation clearances.

02. Secure the brackets

Use anchors suited to the wall, ceiling or beam. Fix the kit brackets and check that they are secure before offering up the heater.

03. Position the heater

Insert the connecting pieces into the grooves or fittings on the back of the heater. Place the heater on its brackets and adjust its direction.

04. Lock the assembly

Tighten the connections and check that both brackets hold the heater. Keep its heating face directed towards the occupied area and its length horizontal.

BRACKET SPACING

Minimum distance between the two brackets for this reference: 400 mm.

Electrical supply

Disconnect the power before making any connection. The circuit, controls and connections must suit the product's rated power. Keep the cable away from hot surfaces and maintain earth continuity for the intended connection.

This model is supplied with a mains plug. Connect it to a suitable, accessible socket outside the heater's hot area.

Before first switching on, check the fastenings, stability, cable route and clear space around the heater.

HEATSTRIP · THX2400DCR-EU

Controls and use

Three levels: L1, L2, L3

Point the remote control at the receiver and press On. The + and - buttons change the level from L1, the lowest, to L3, the highest.

Control	Function
On / off	Switch the radiant heater on or off
+ / - in heating mode	Select L1, L2 or L3
Timer button	Start the countdown
+ / - in timer mode	Select the time, up to 24 hours

A duration suited to your session

The timer switches off the heater when the countdown ends. To change the power while the display shows the time, return to heating mode using its dedicated button.

The remote control

Keep the remote control away from water and use the batteries specified for the supplied model. After switching off, let the heater cool completely before touching or moving it.

HEATSTRIP · THX2400DCR-EU

Maintenance and your contact

Regular cleaning

Switch the heater off, disconnect its power supply and wait until it has cooled completely. The manuals specify at least 30 minutes after switch-off.

Clean the surfaces with a soft cloth and mild detergent, then remove residues with a clean cloth. Avoid abrasives, solvents and high-pressure jets. Keep electrical equipment and recess cavities protected from water.

Check the cable, brackets and fastenings. Maintenance at least every three months helps preserve the heater; clean more often where it is exposed to sea spray.

Guidelines for use

Keep children and people who need supervision away from hot surfaces. In a small space, continuously supervise anyone who cannot leave without help.

Do not cover the heater during use. Keep cables, fabrics, furniture and flammable materials away from its surfaces and observe the installation clearances.

If the cable or heater is damaged, disconnect the power and contact Radiant Heater before using it again.

A simple check if the heater does not start

Power supply	Check that power is available and the control is set correctly.
Remote control	Check the batteries and the line of sight to the receiver.
Timer	Check whether the timer period has ended.

YOUR RADIANT HEATER CONTACT

+33 (0)4 23 15 02 48radiant-heater.com/contact

For advice, quote reference THX2400DCR-EU and the mounting arrangement.