

HEATSTRIP · ACCESSORY SHEET

TT-MTR timer and remote control

Set the operating time using the wall controller or remote control. The heater switches off automatically when the timer ends.



Shop reference	TTMTR
Manufacturer's reference	TT-MTR
Maximum capacity	16 A - 220 to 240 V
Timer	1 h, 2 h, 4 h or continuous
Remote control	Infrared; range approximately 10 m

Compatibility

Heater with external control; total load up to 16 A

HEATSTRIP · TTMTR

Preparing and using this accessory

Control from the wall unit or remote control

Button	Action
ON/OFF	Switch the heater on or off
TIMER	Cycle between 1 h, 2 h, 4 h and continuous mode
Timer indicator light	Display the selected duration

Timer or continuous mode

A timer of 1, 2 or 4 hours switches the heater off automatically at the end of the period. Continuous mode keeps it running until manually switched off.

For infrared remote control, keep a clear line of sight to the wall unit. The stated range is approximately 10 m.

Capacity and position

The total controlled load is limited to 16 A. Use a circuit and connections suited to the connected appliances. Mount the TT-MTR in a dry place with readily accessible controls.

Maintenance

Disconnect the power before cleaning. Wipe the housing with a soft cloth and keep the remote control away from water.

YOUR RADIANT HEATER CONTACT

+33 (0)4 23 15 02 48

radiant-heater.com/contact

Accessory reference: TTMTR.