Radiant Heater

PRODUCT MANUAL

HEATSTRIP®

Design All Black 3600 W

Reference: THD3600EU

3 600 W · All black

External control

Mounting, controls and maintenance of your heater.

A document dedicated to this reference, with useful guidance for enjoying your outdoor space.

English

HEATSTRIP · THD3600EU

Your product in detail

Radiant Heater reference	THD3600EU
Range	Design All Black
Rated power	3 600 W
Power supply	European version: 230 V AC
Dimensions	1 804 × 170 × 48.5 mm
Finish	All black
Protection rating	IP55
Control	External control

How the heater works

Electric radiant panel without visible red light, heating people and surfaces within its radiation zone.

Consumption at full power

One hour of operation at maximum power uses 3.6 kWh. Actual consumption depends on operating time and the selected level, where the model allows adjustment.

HEATSTRIP · THD3600EU

Position the heater

Minimum heater height	2.1 m
Recommended mounting height	Approximately 2.5 m
Maximum height	2.7 m

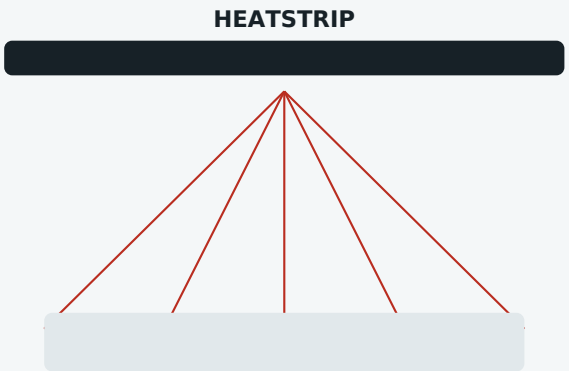

Position the radiation above the occupied area.

Wall or ceiling

Position the heater above the table or outdoor seating area, with its radiant face directed towards people. Keep its length horizontal; adjust the angle using the kit brackets.

Allow the clearances

Keep the clear space specified for the supplied brackets, mounting position and nearby materials. Keep lights, fans, cables and objects out of the radiation path.

HEATSTRIP · THD3600EU

Mounting and connection

01. Mark the fixing points

Determine the positions of the two brackets in the supporting structure. Allow for the heater's weight, mounting height and installation clearances.

02. Secure the brackets

Use anchors suited to the wall, ceiling or beam. Fix the kit brackets and check that they are secure before offering up the heater.

03. Position the heater

Insert the connecting pieces into the grooves or fittings on the back of the heater. Place the heater on its brackets and adjust its direction.

04. Lock the assembly

Tighten the connections and check that both brackets hold the heater. Keep its heating face directed towards the occupied area and its length horizontal.

Electrical supply

Disconnect the power before making any connection. The circuit, controls and connections must suit the product's rated power. Keep the cable away from hot surfaces and maintain earth continuity for the intended connection.

Check the cable and connection of the supplied appliance. Provide a power supply suited to its rating and position.

Before first switching on, check the fastenings, stability, cable route and clear space around the heater.

HEATSTRIP · THD3600EU

Controls and use

An external control suited to your heater

This model uses external power control suited to its load: a switch, timer or control device intended for the circuit.

Switch the heater on using this control, then switch it off after use. A compatible timer can switch it off automatically.

Switching on	Using the external control
Rated power	3 600 W
Off	External control or compatible timer

TT-MTR option

The TT-MTR wall controller offers 1, 2 or 4 hours, plus continuous mode. Its switching capacity is 16 A; the total connected load must stay within this limit.

WELL-POSITIONED WARMTH

Direct the heater towards the people and surfaces to be heated. For panel models, allow the heater to gradually reach its operating temperature.

After use

Switch off the heater using its controls. Let it cool completely before touching or cleaning it, or moving a heater on a stand.

HEATSTRIP · THD3600EU

Maintenance and your contact

Regular cleaning

Switch the heater off, disconnect its power supply and wait until it has cooled completely. The manuals specify at least 30 minutes after switch-off.

Clean the surfaces with a soft cloth and mild detergent, then remove residues with a clean cloth. Avoid abrasives, solvents and high-pressure jets. Keep electrical equipment and recess cavities protected from water.

Check the cable, brackets and fastenings. Maintenance at least every three months helps preserve the heater; clean more often where it is exposed to sea spray.

Guidelines for use

Keep children and people who need supervision away from hot surfaces. In a small space, continuously supervise anyone who cannot leave without help.

Do not cover the heater during use. Keep cables, fabrics, furniture and flammable materials away from its surfaces and observe the installation clearances.

If the cable or heater is damaged, disconnect the power and contact Radiant Heater before using it again.

A simple check if the heater does not start

Power supply	Check that power is available and the control is set correctly.
External control / timer	Check the control setting and selected duration if a timer is fitted.

YOUR RADIANT HEATER CONTACT

+33 (0)4 23 15 02 48
radiant-heater.com/contact
For advice, quote reference THD3600EU and the mounting arrangement.